




COLOR ASSIGNMENT BY SECTION

Did you know this T8 function yet?

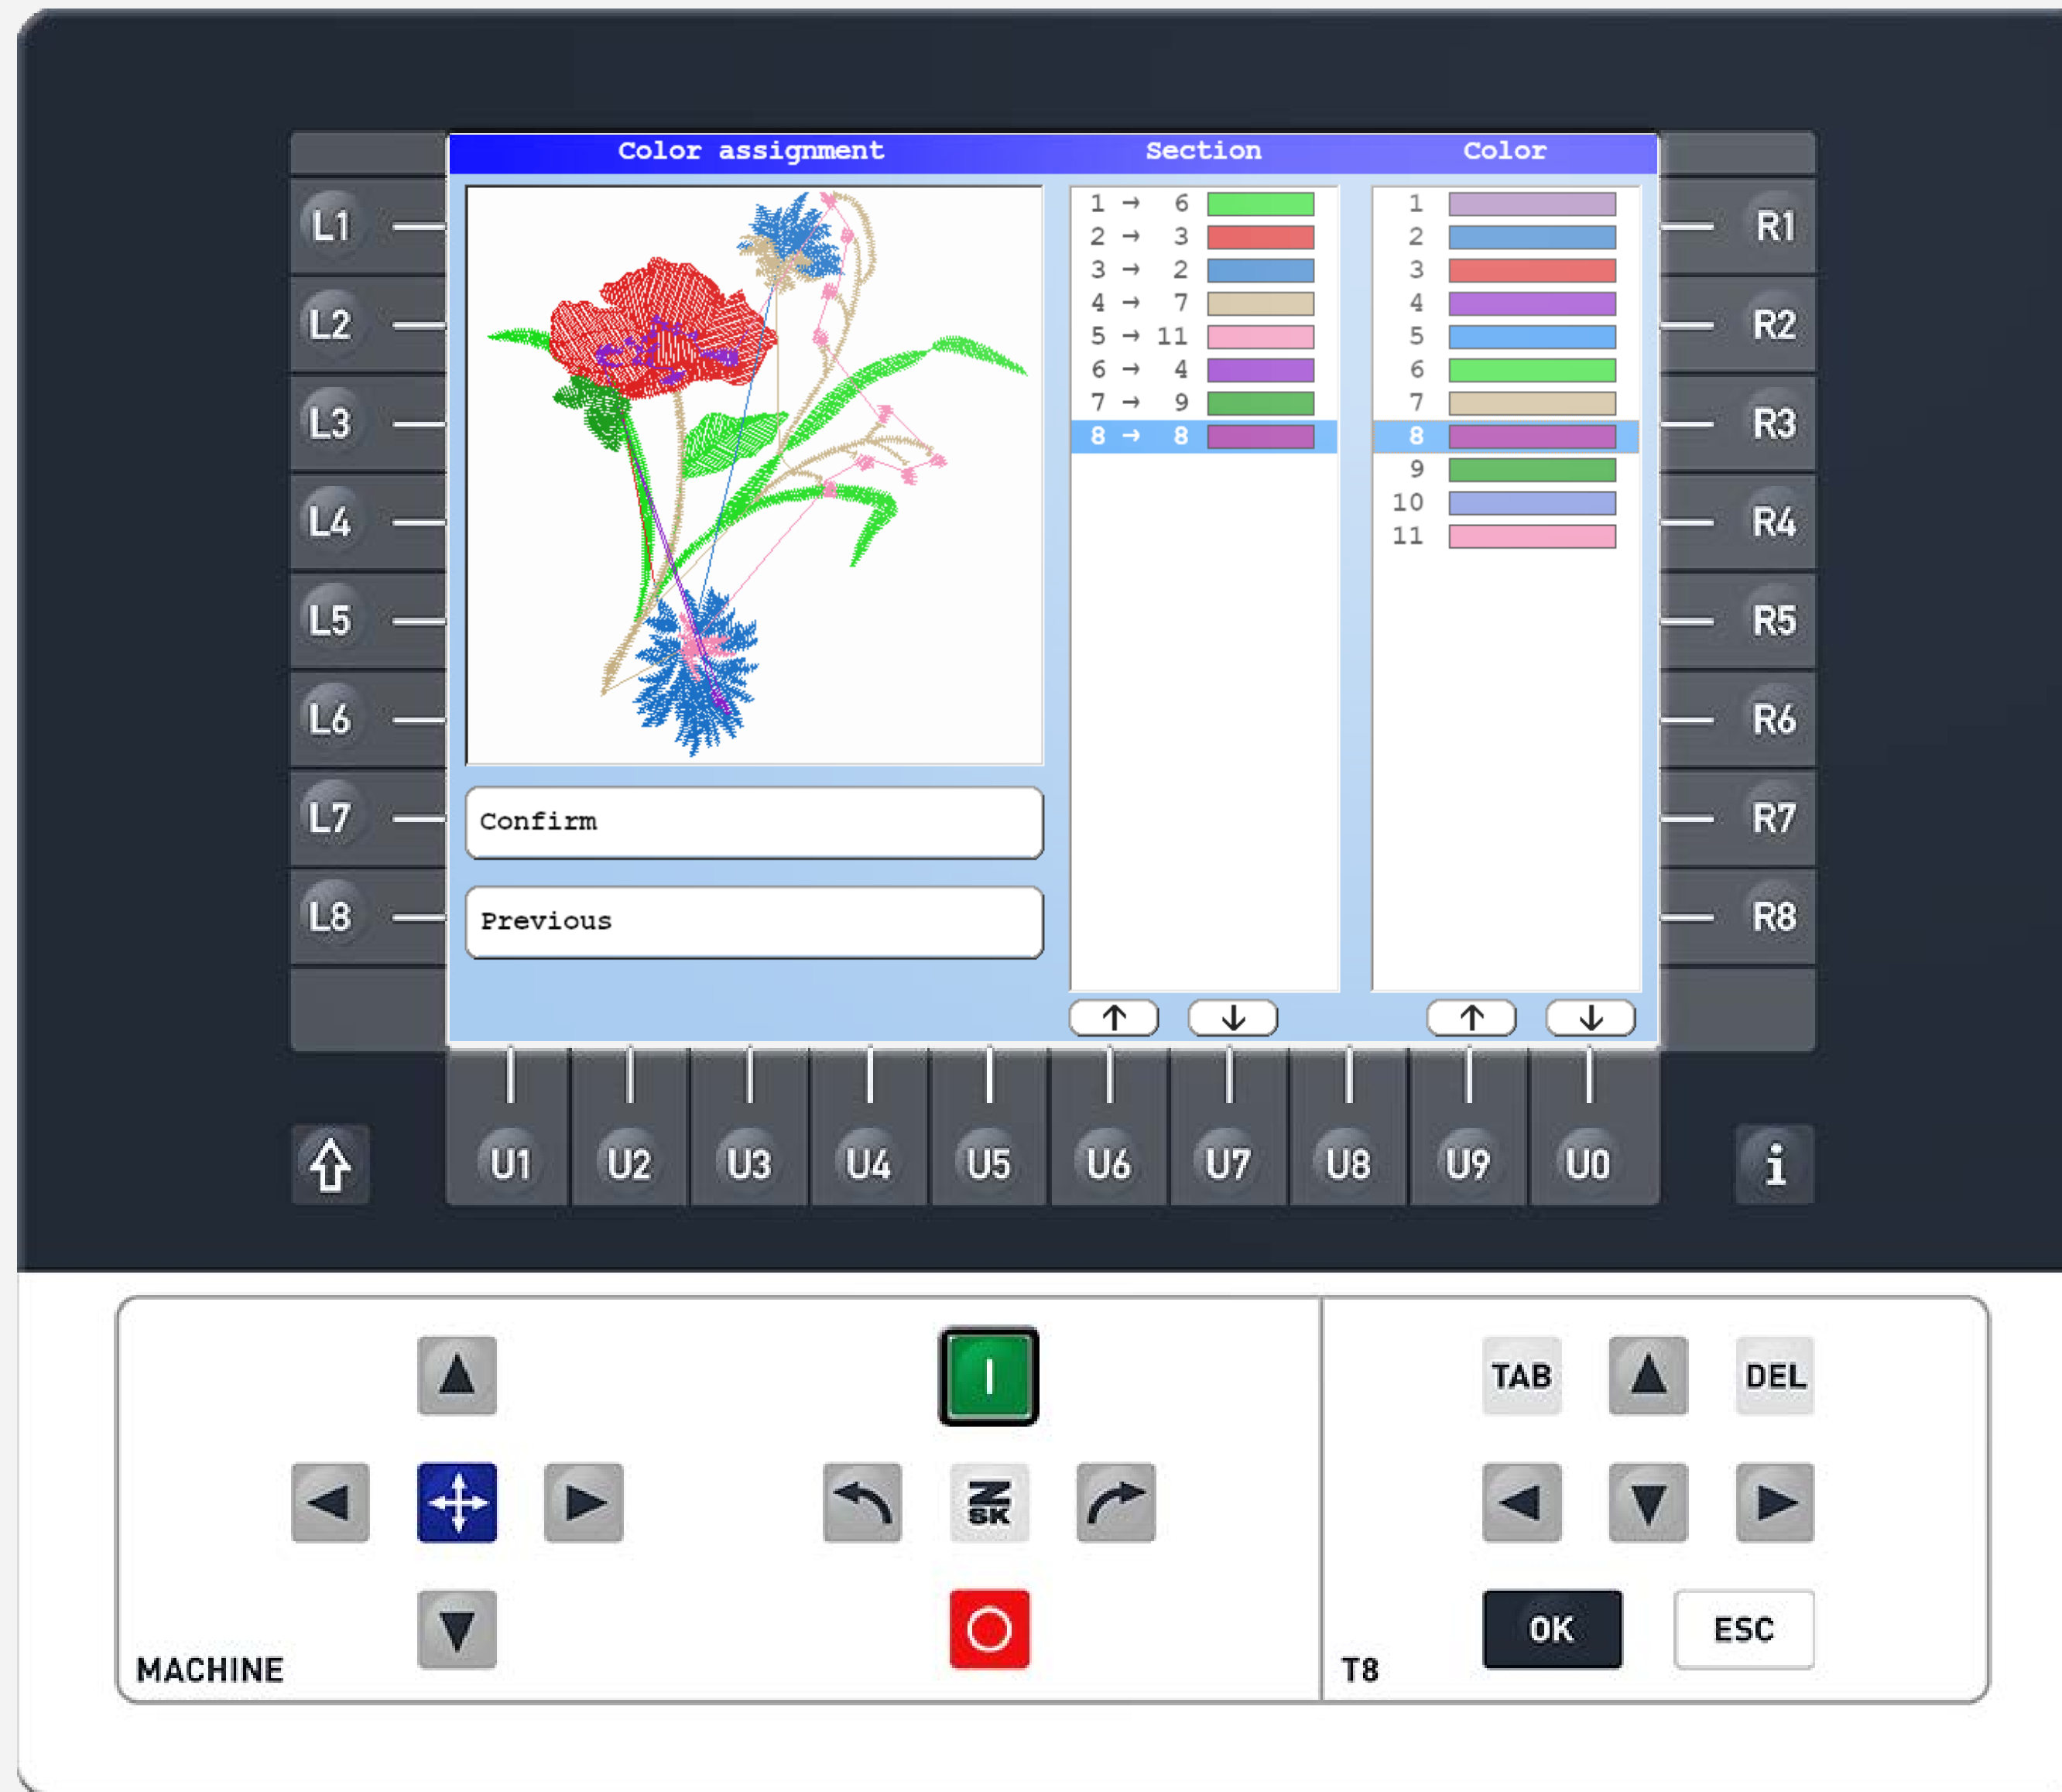

What?

You can assign colors to different sections of the design, not just to individual needles. It's a two-step process:


1. (Setup – Done Once & After Changing Cones): Assign colors to the machine's needles.
2. (Every Time You Load a Design): Visually match colors to different sections of the design.

Why?

If your machine has enough colors, the first step is rarely needed. The second step is much easier because you can see and adjust colors visually. You can set up sections with the same color in the design to use different colors on the machine.

Requirements:


Since software release 19-03-2025

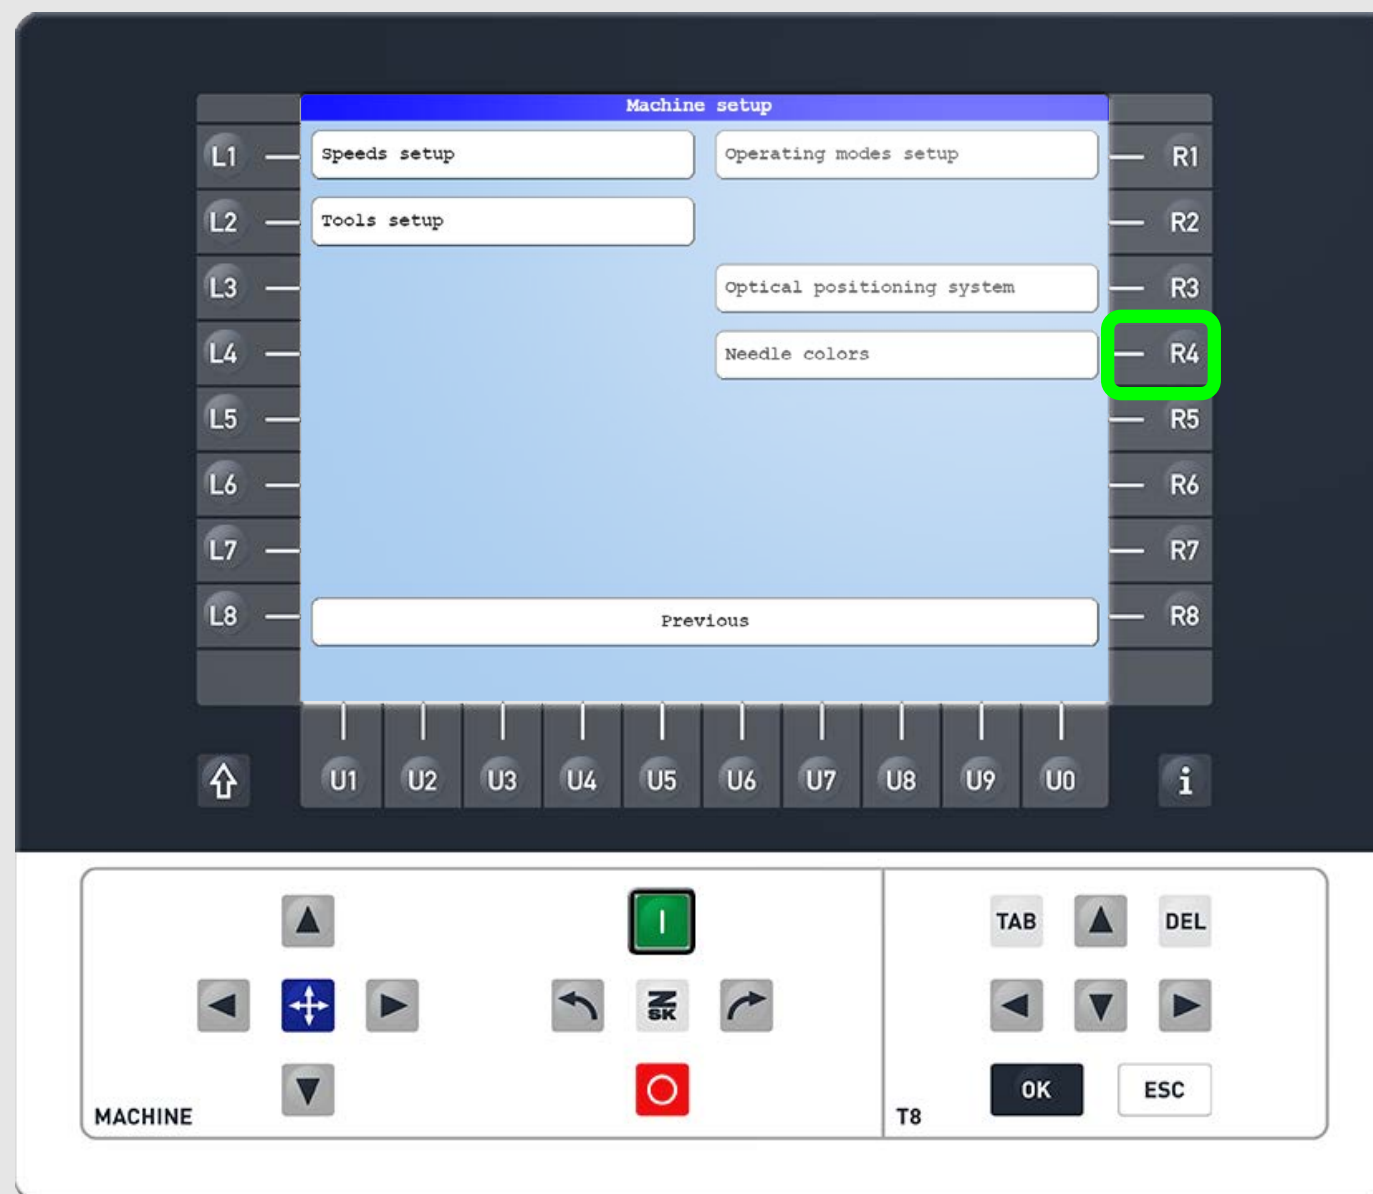

Setup Step1


Make sure virtual needle numbers are activated (Vol.14) and standard optimization is turned on (Vol.21.). On the start screen press L2 to enter the machine setup tab.

Press R4 to enter the needle colors tab.

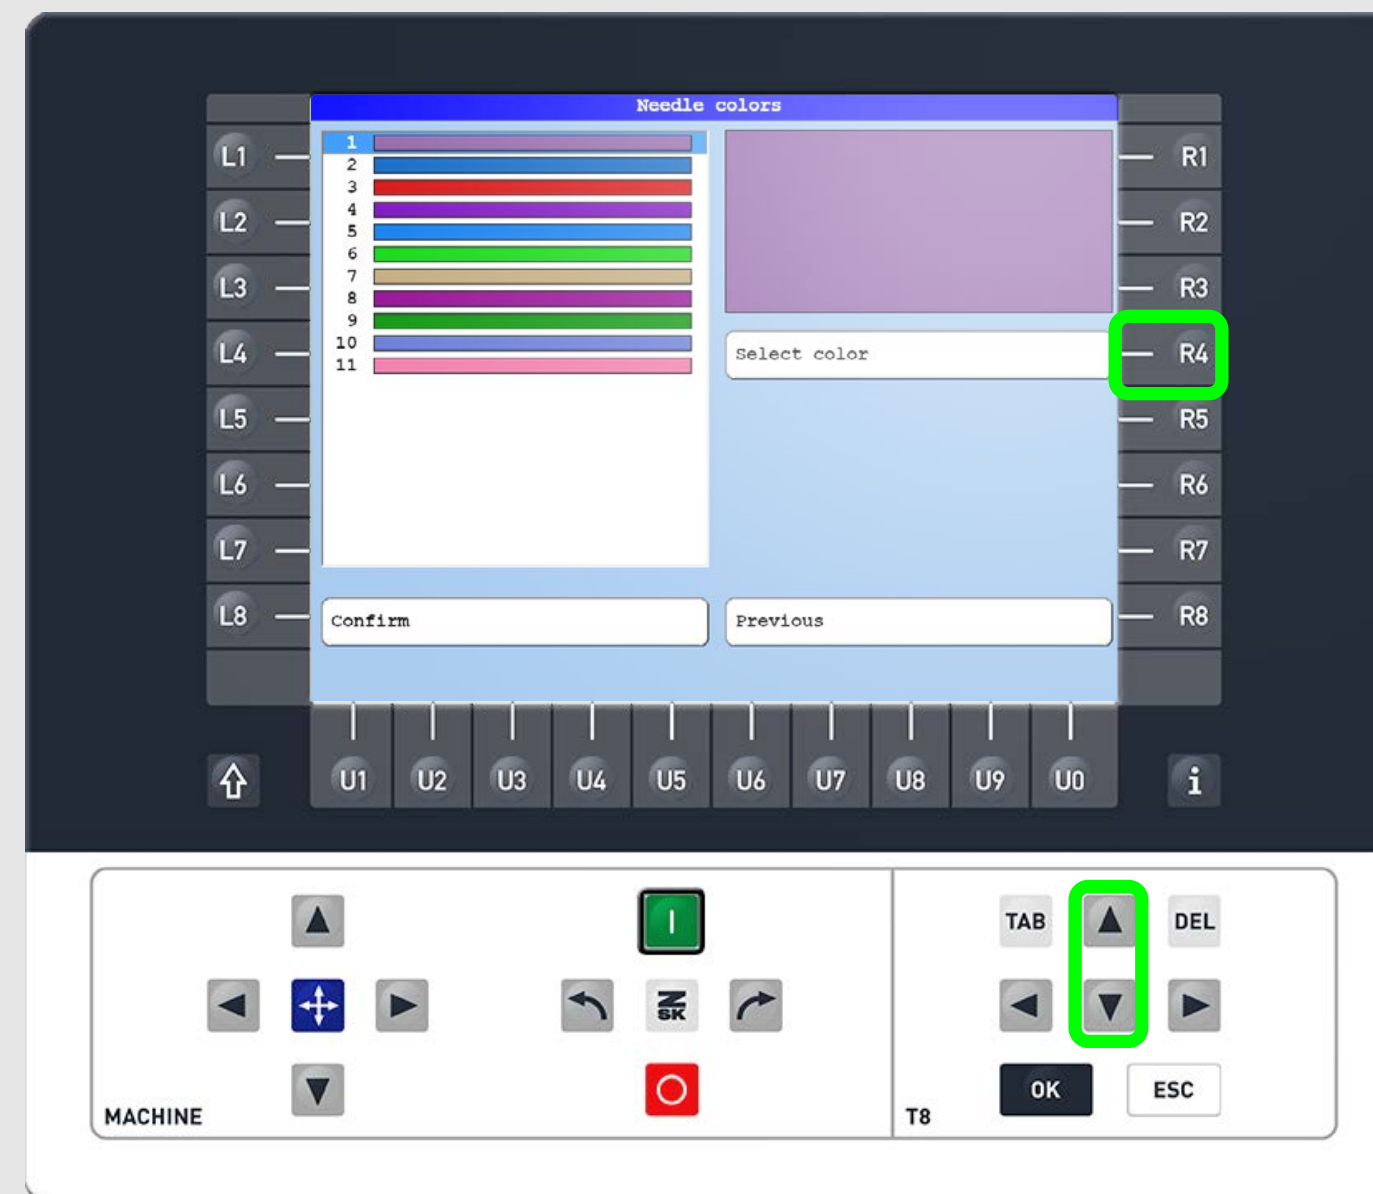


Setup Step2

Use the arrow keys to choose the needle number you want to assign, then press R4 to select a color.

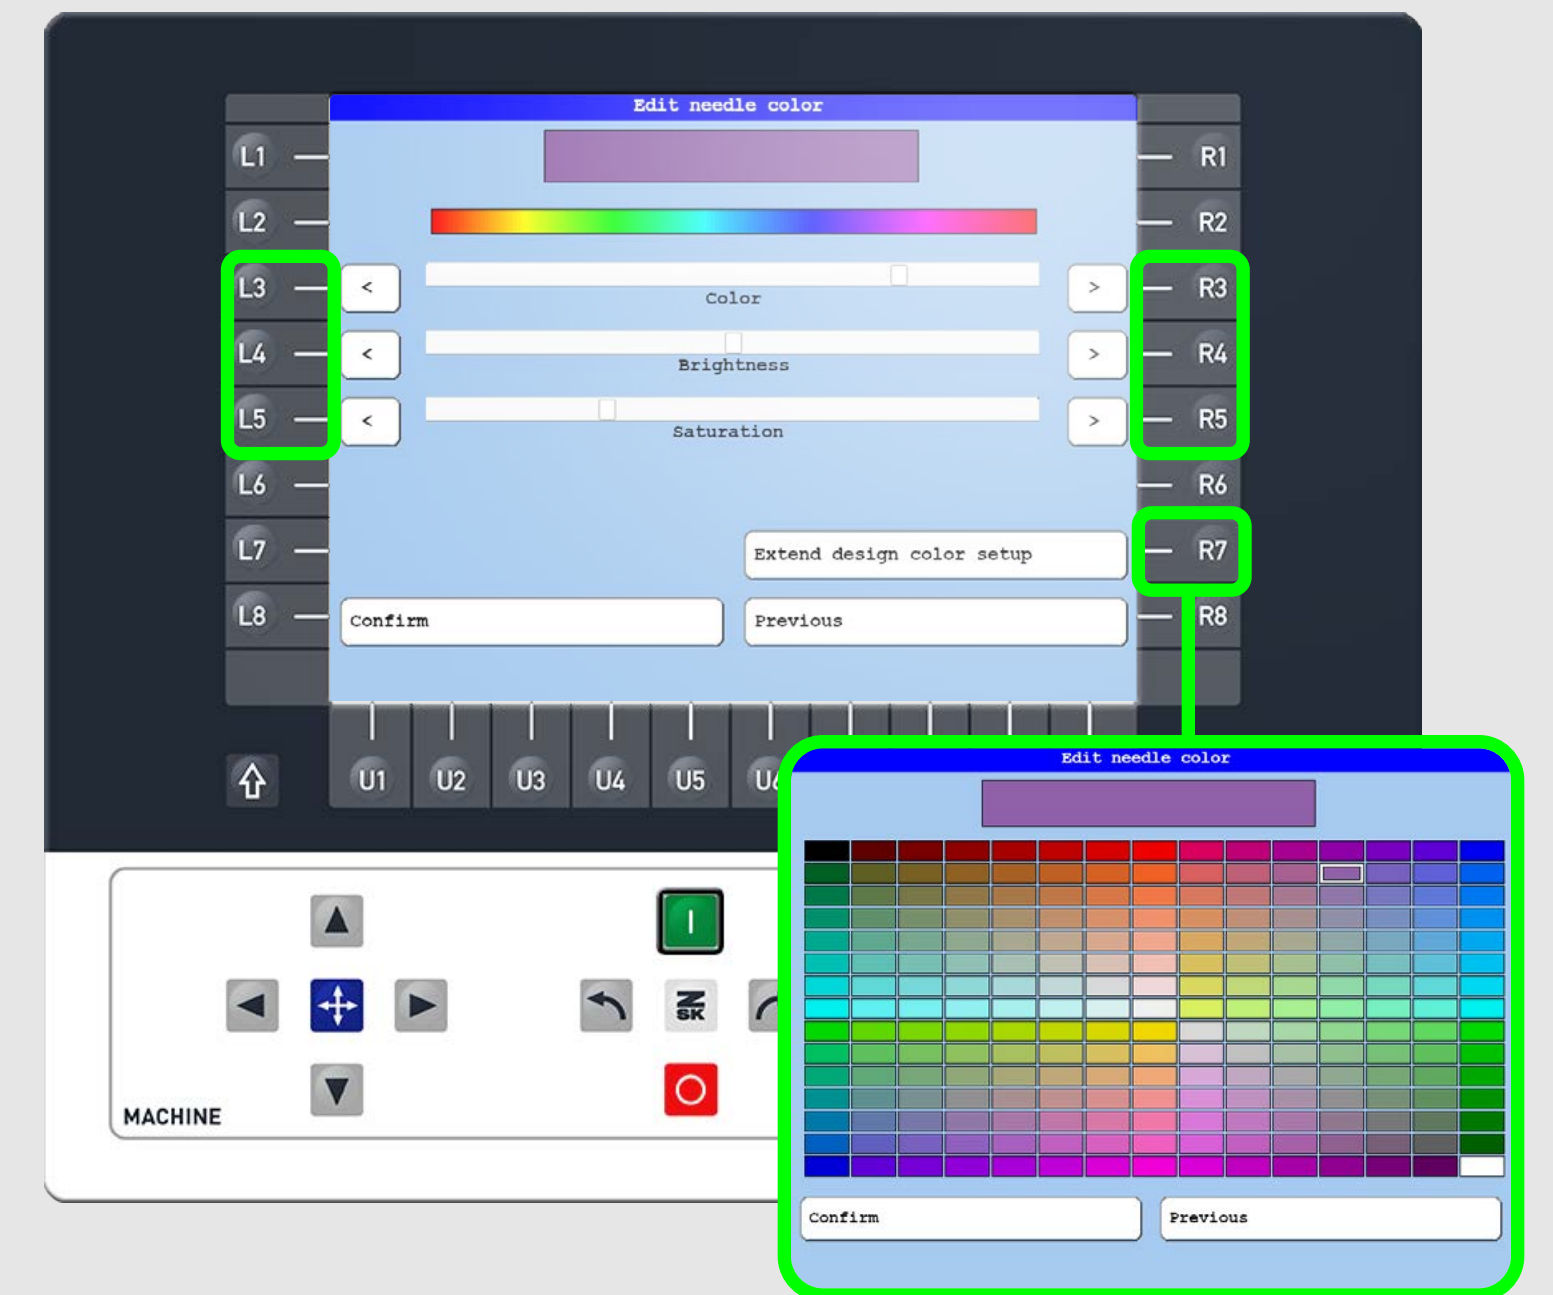


Setup Step3

Use the sliders L3/R3, L4/R4, L5/R5 to define the color or press R7 to select a color from a table. Confirm your changes.

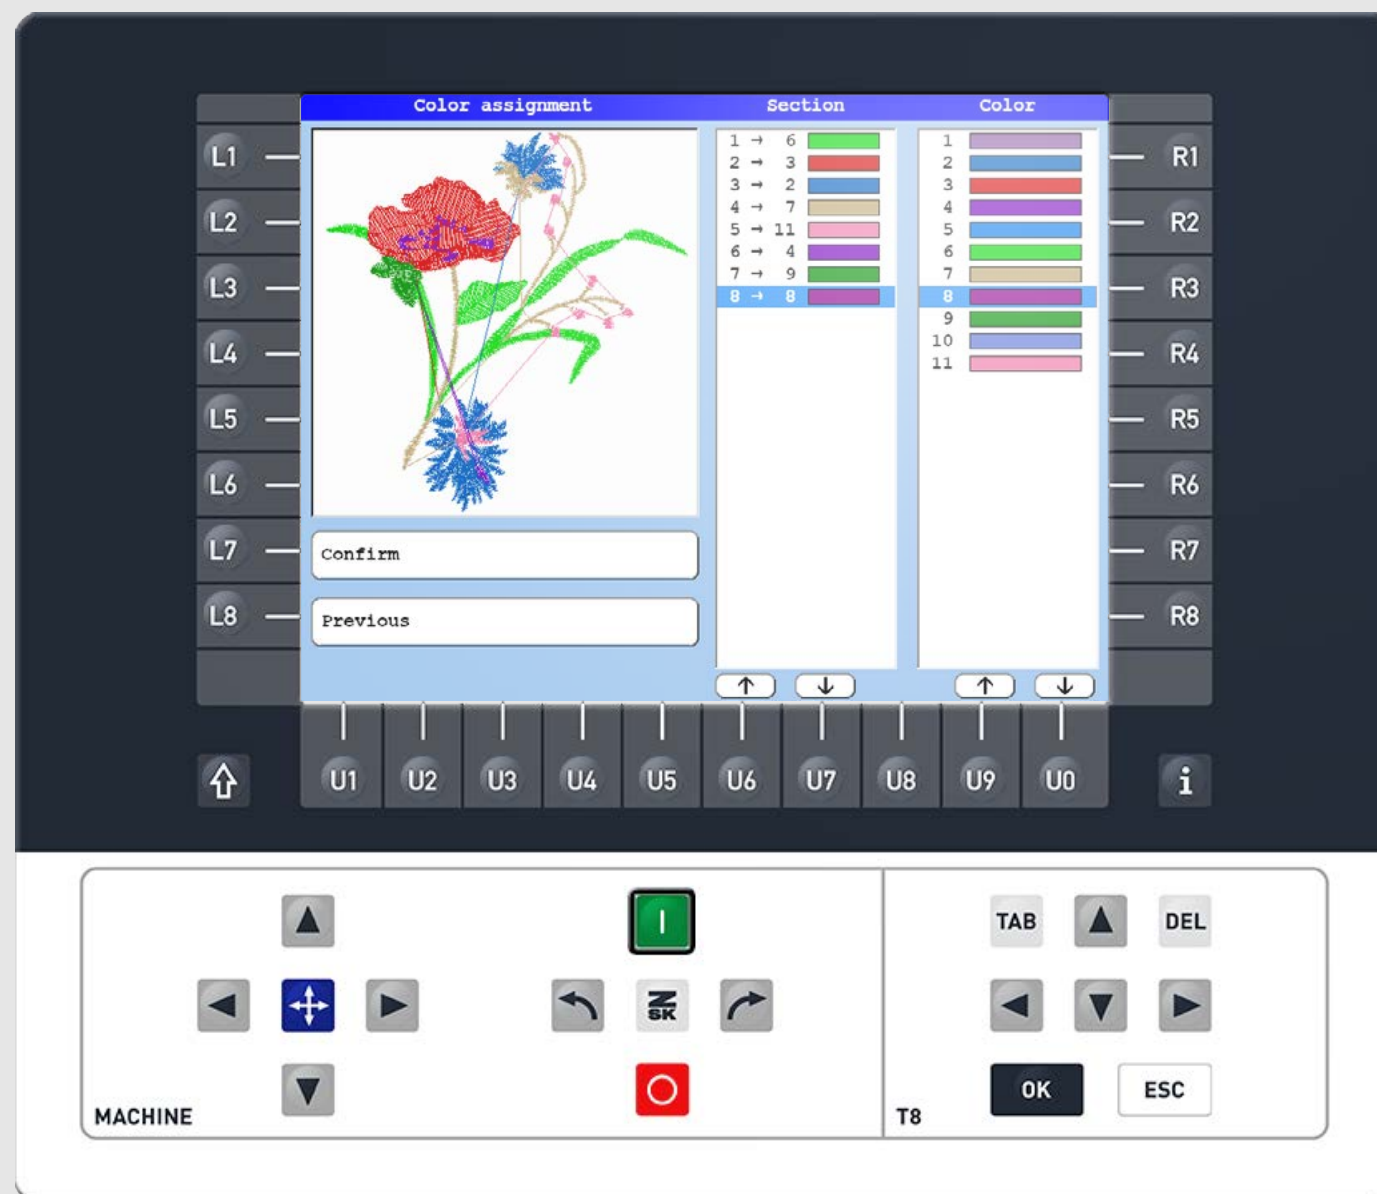


Assignment Step1

Load a design from USB or network and make your usual modifications. Open the color assignment tab by pressing R5 on the start screen.

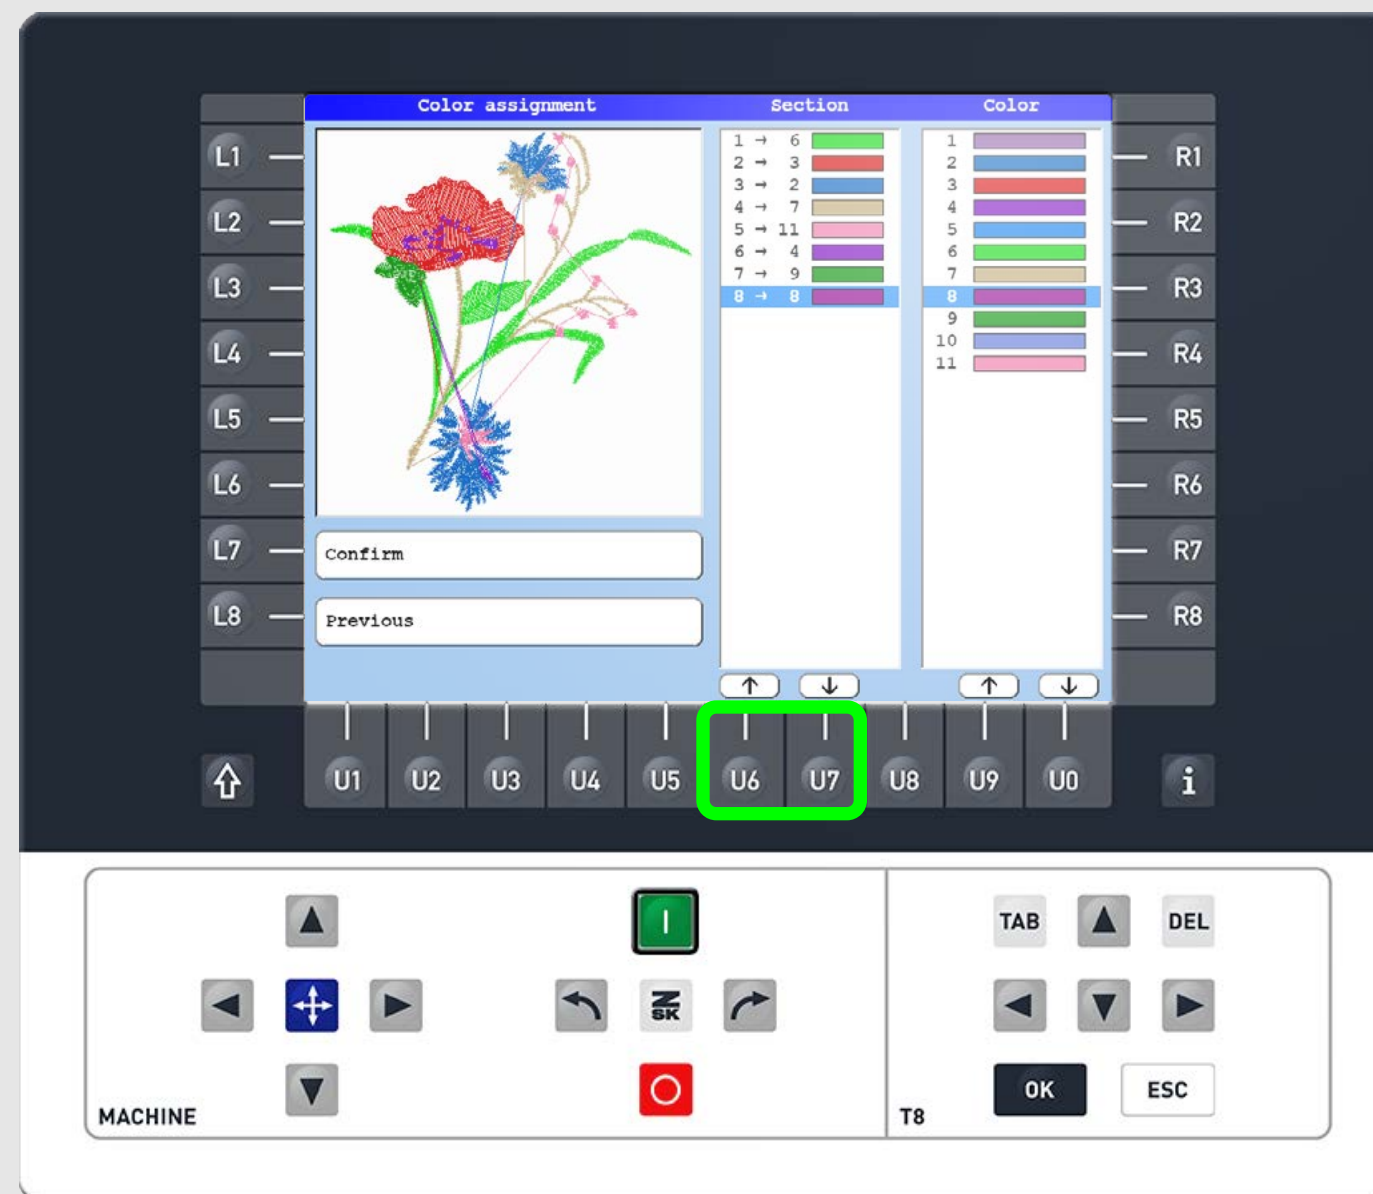

Assignment Step2

Use the U6 and U7 function keys to choose the desired section. The selected section will flash in the preview on the left.

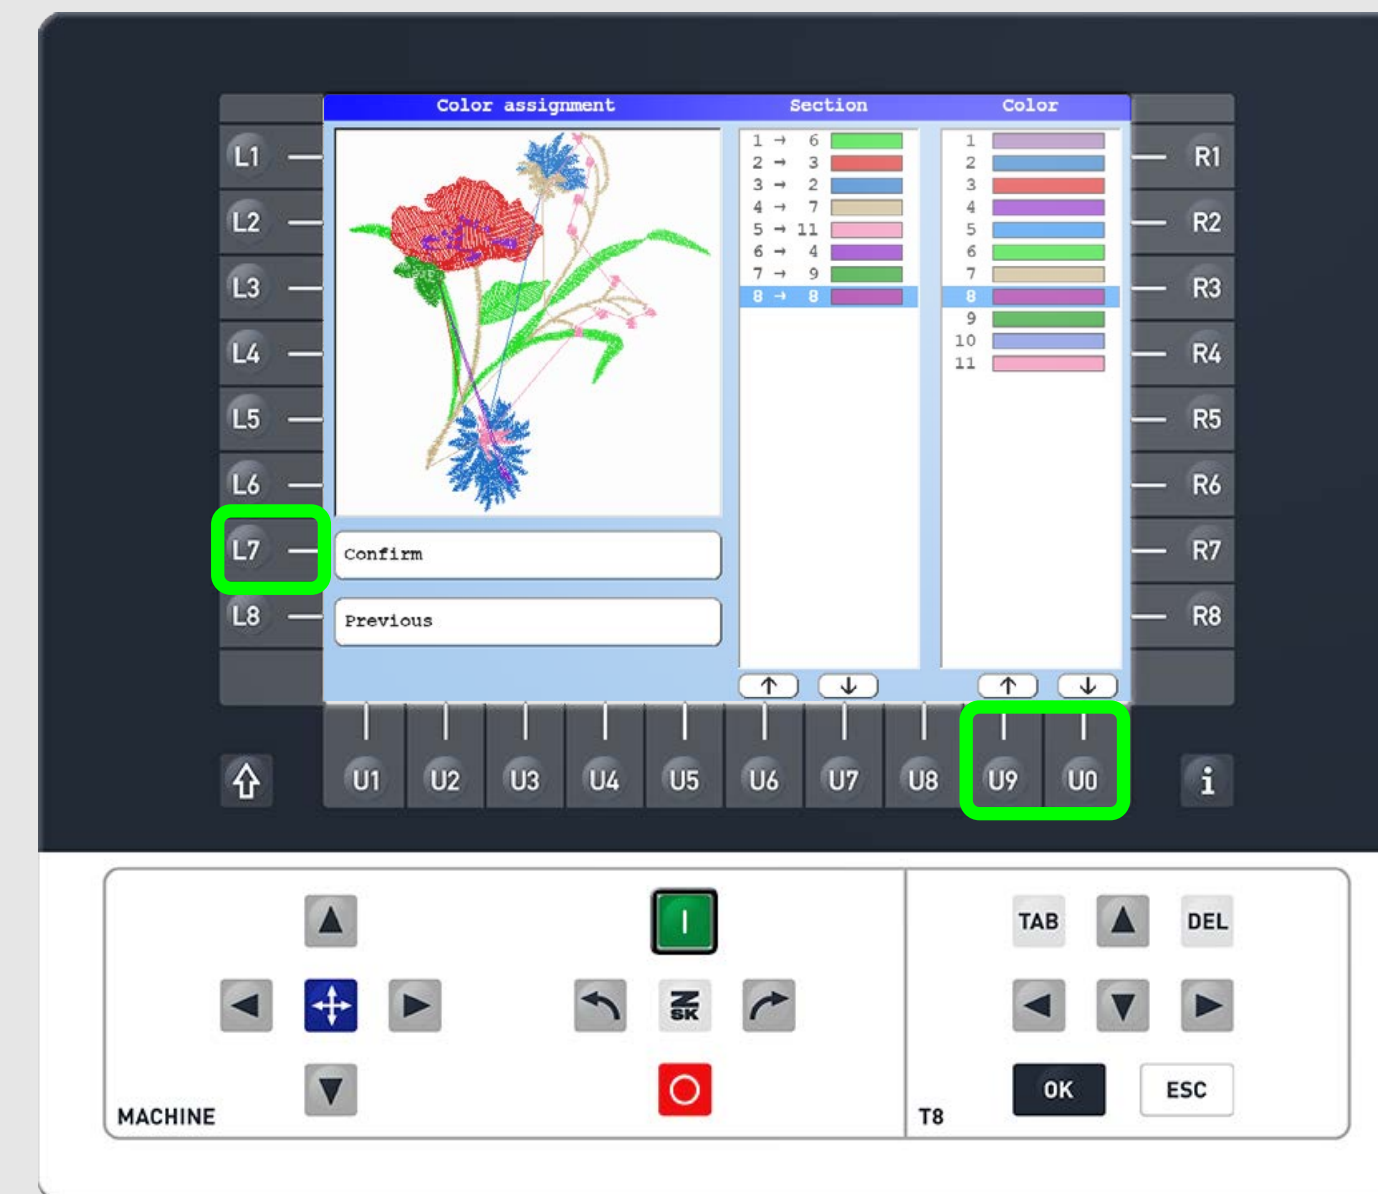

Assignment Step3

Use the U9 and U0 function keys to choose the desired color. The selected section will be displayed in the correct color in the preview on the left. Confirm your changes.



ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
47800 Krefeld, Germany

Fon: +49 (0) 2151 444 0
Fax: +49 (0) 2151 444 170
E-Mail: zsk@zsk.de