



User manual

T8/T8-2 Control unit

Machine Password



02447V10 [GB] - 2018

Subject to change!
Änderungen vorbehalten!

© ZSK Stickmaschinen GmbH

Printed in Germany

[GB] 02447V10

T8-Machine Password

Fundamental Informations

Download Software-Updates:


<https://www.zsk.de/t8-software-en.html>

YouTube Video, Install Software Update:

<https://www.youtube.com/watch?v=JNCRShq8pKk>

NOTICE

All discribed functions of the control unit T8-/T8-2 will be started at the Base Screen (BS).

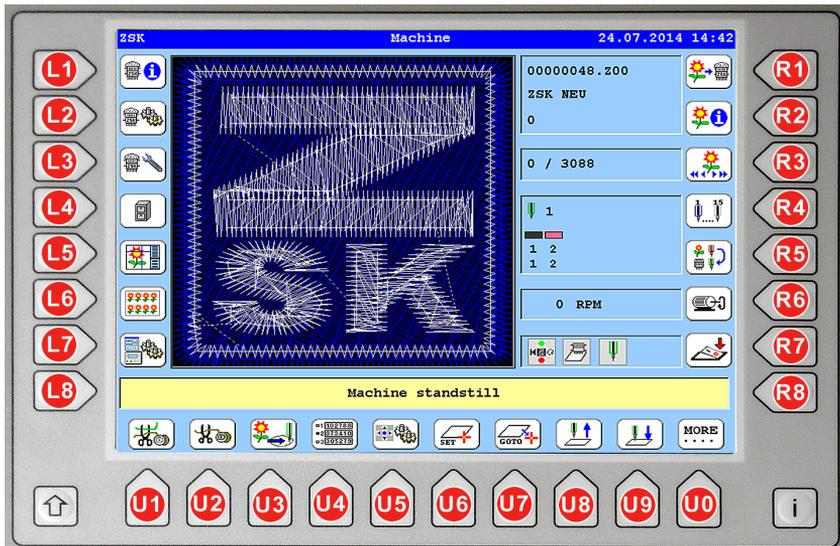

The keys used in the function descriptions are shown in the above T8-/T8-2-figure.

General

In case the machine, once a recent-generation MSCI-control has been powered up, issues an error message concerning an outdated user authorization or refuses access, the following instructions explain how to re-enter the machine password.




Avoid adjusting the date unnecessarily because this can lead to the loss of your access authorization. You can adjust the date once by ± 1 day.

Machine password conflict

Machine password conflicts are made evident once the machine is started.

- Switch on the machine at the main switch.

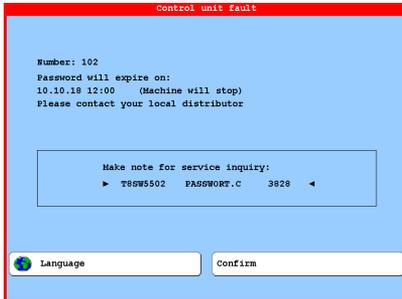

⇒ During the startup of the ZSK machine software, the dialog *Control unit fault* is displayed:

⇒ The message indicates the remaining production period (expires on date/time indicated by xx.xx.xx / xx:xx) or that your user authorization has already expired.

- Press **[L8]** *Language* to display the message in another language.

CAUTION

From four weeks before expiry of the user authorization, a message is displayed each time the machine is switched on and again at midday. The user authorization expires at midday on the indicated date.




- Record the marked information **(1)-(2)** from the message window.


- Press **[R8]** *Confirmation* to hide the message.



- ⇒ The T8 base screen is displayed.
- Press **[L4]** *Machine informationen*.

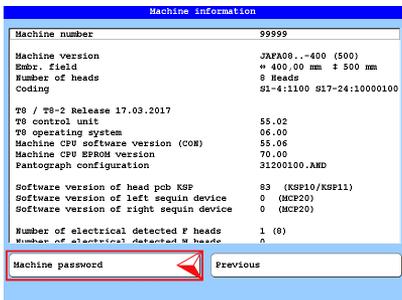

- In the dialog *Machine Information* press the key **[L8]** *Machine password*.

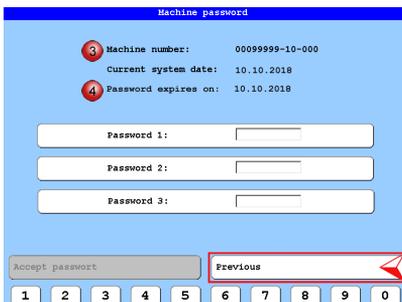

- ⇒ The dialog *Machine password* is displayed.
- Record the marked information **(3)-(4)** from the message window.
- Press **[R8]** *Previous* to exit the dialog.
- Request a new password with the password form.

Request new password

To request a new password, please have the following information ready:

Customer name:
Machine-No.: - vom Type plate
Error-No.: - from dialog Control unit fault (1)
Service inquiry: - from dialog Control unit fault (2)
Machine-No.: - from dialog Machine password (3)
Password expires on: - from dialog Machine password (4)

- Contact your **ZSK representative** or the **ZSK**. Here you will get the necessary information and a new password.

ZSK-Stickmaschinen GmbH, Germany

E-Mail: info@zsk.de
Fax: +49 02151 444-170


NOTICE

If you wish to make contact by fax, please use the enclosed form and enter the relevant information contained in the error message, as indicated.


CAUTION

An attempt to manipulate the control can cause an immediate machine shutdown.

Enable the machine

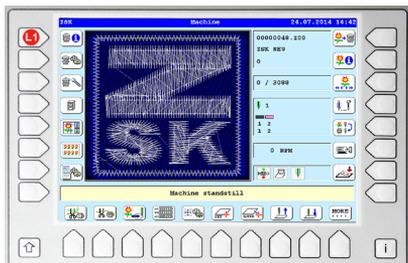

- Press **[L1]** *Machine informationen..*

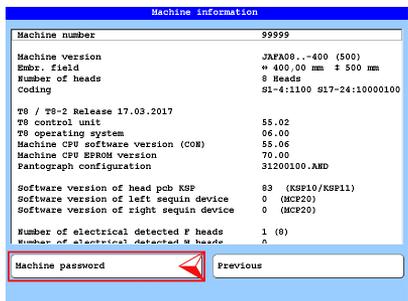

- In the dialog *Machine Information* press the key **[L8]** *Machine password.*

⇒ The cursor is in the entry field *Password 1:* to enter the first part of the password (11 digits).


- Use the keys **[U1]-[U0]** to enter the 1st sub-password supplied by ZSK Sales in the first line.

⇒ The cursor jumps to the input field *Password 2:* to enter the second part of the password (11 digits).

- Use the **[U1]-[U0]** keys to enter the 2nd subpassword in the 2nd line.

⇒ The cursor jumps to the input field *Password 3:* to enter the third part of the password (10 digits).


- Use the **[U1]-[U0]** keys to enter the 3rd subpassword in the 3rd line.

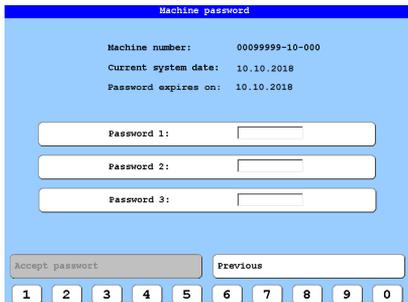


NOTICE

The input process can be canceled at any time by pressing the Button [R8] *Previous*.

If an incorrect password entry is detected, the cursor can be reset to the associated defective password entry field using the keys [L4]-[R4], [L5]-[R5], [L6]-[R6]. The cursor can be moved to the left and right within the input fields using the cursor keys [◀] and [▶] of the T8 control unit. The key [DEL] can be used to remove numbers to the left of the cursor and replace them with the correct number(s).

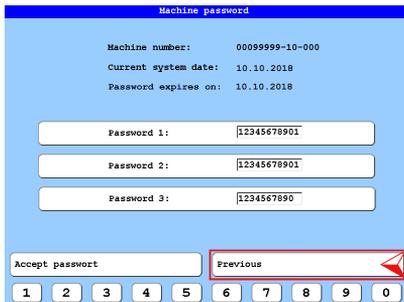

- Check the entered password again.
- After the password has been entered in full, the button [L8] *Accept password* is displayed and the password is accepted by pressing the key [L8].

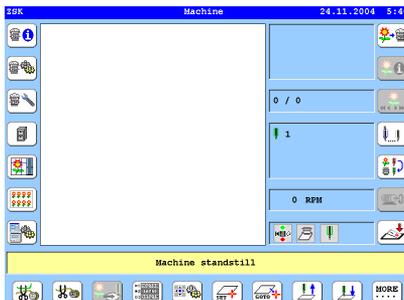

⇒ The base machine screen is displayed again.

Incorrect password entry

- ⇒ If the password was entered incorrectly and then the active key **[L8] Accept password** was pressed, the error message *Control unit fault* is displayed.



- Close the error dialog with the key **[R8] Confirmation**.
⇒ The dialog *Machine information* appears again.

Correct the password as described under „*Enable the machine*“.



ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
D-47800 Krefeld
Germany

Service Department

To be completed by the customer:

Customer name:

Machine-No.:

XXXXX

(stated on type plate)

Machine-No.:

XXXXXXXX-XX-XXX

(from dialog Machine password)

Password valid until:

XX.XX.XX

(from dialog Control unit fault)

Error No.:

XXXXX

(from dialog Control unit fault)

Program version:

XXXXXXXXX PASSWORT.C XXX

(Service inquiry from dialog Control unit fault)

To be completed by ZSK representative/ZSK:

Customer's Fax-No.:

Password valid until:

Password 1:

(1. Password edit line from dialog Machine password)

Password 2:

(2. Password edit line from dialog Machine password)

Password 3:

(3. Password edit line from dialog Machine password)



© 2018 ZSK Stickmaschinen GmbH
Printed in Germany

ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
D-47800 Krefeld
Germany

www.zsk.de
zsk@zsk.de