



INSTALLATION GUIDE Video Tutorial



RELOAD YOUR BACKUP IN EPCWIN

How to restore your system settings and parameters from the manual backup.

Step 1: Open EPCwin and the “parameter backup” dialog.

After the Upgrade or reinstallation has been successfully completed, the previously created backup can be loaded back into the software. The reloading is also done in the “Parameter backup” dialog. You can access the dialog via the main menu item “Input/Output”. If you need a detailed description, please refer to the first step of our “Backup your EPCwin Data” manual. Of course, you can also watch our Installation video.

Step 2: Configure the backup.

Before you reload the backup, select the parameters you want to restore. As we already recommended in our backup guide, to use “Select all”. Of course, you can also restore just a few settings.

Step 3: Start the restore process.

Click on the button “Reload manually backup” to start the restoring process. Therefore choose the path of the backup you want to load back into the software.

Step 4: Apply the changes.

The reloading of the data was successful when you receive a confirmation from the software. To activate the settings and parameters, EPCwin must be restarted. The software closes automatically with “OK”.

