




MOVE TO SELECTED STITCH

Did you know this T8 function yet?

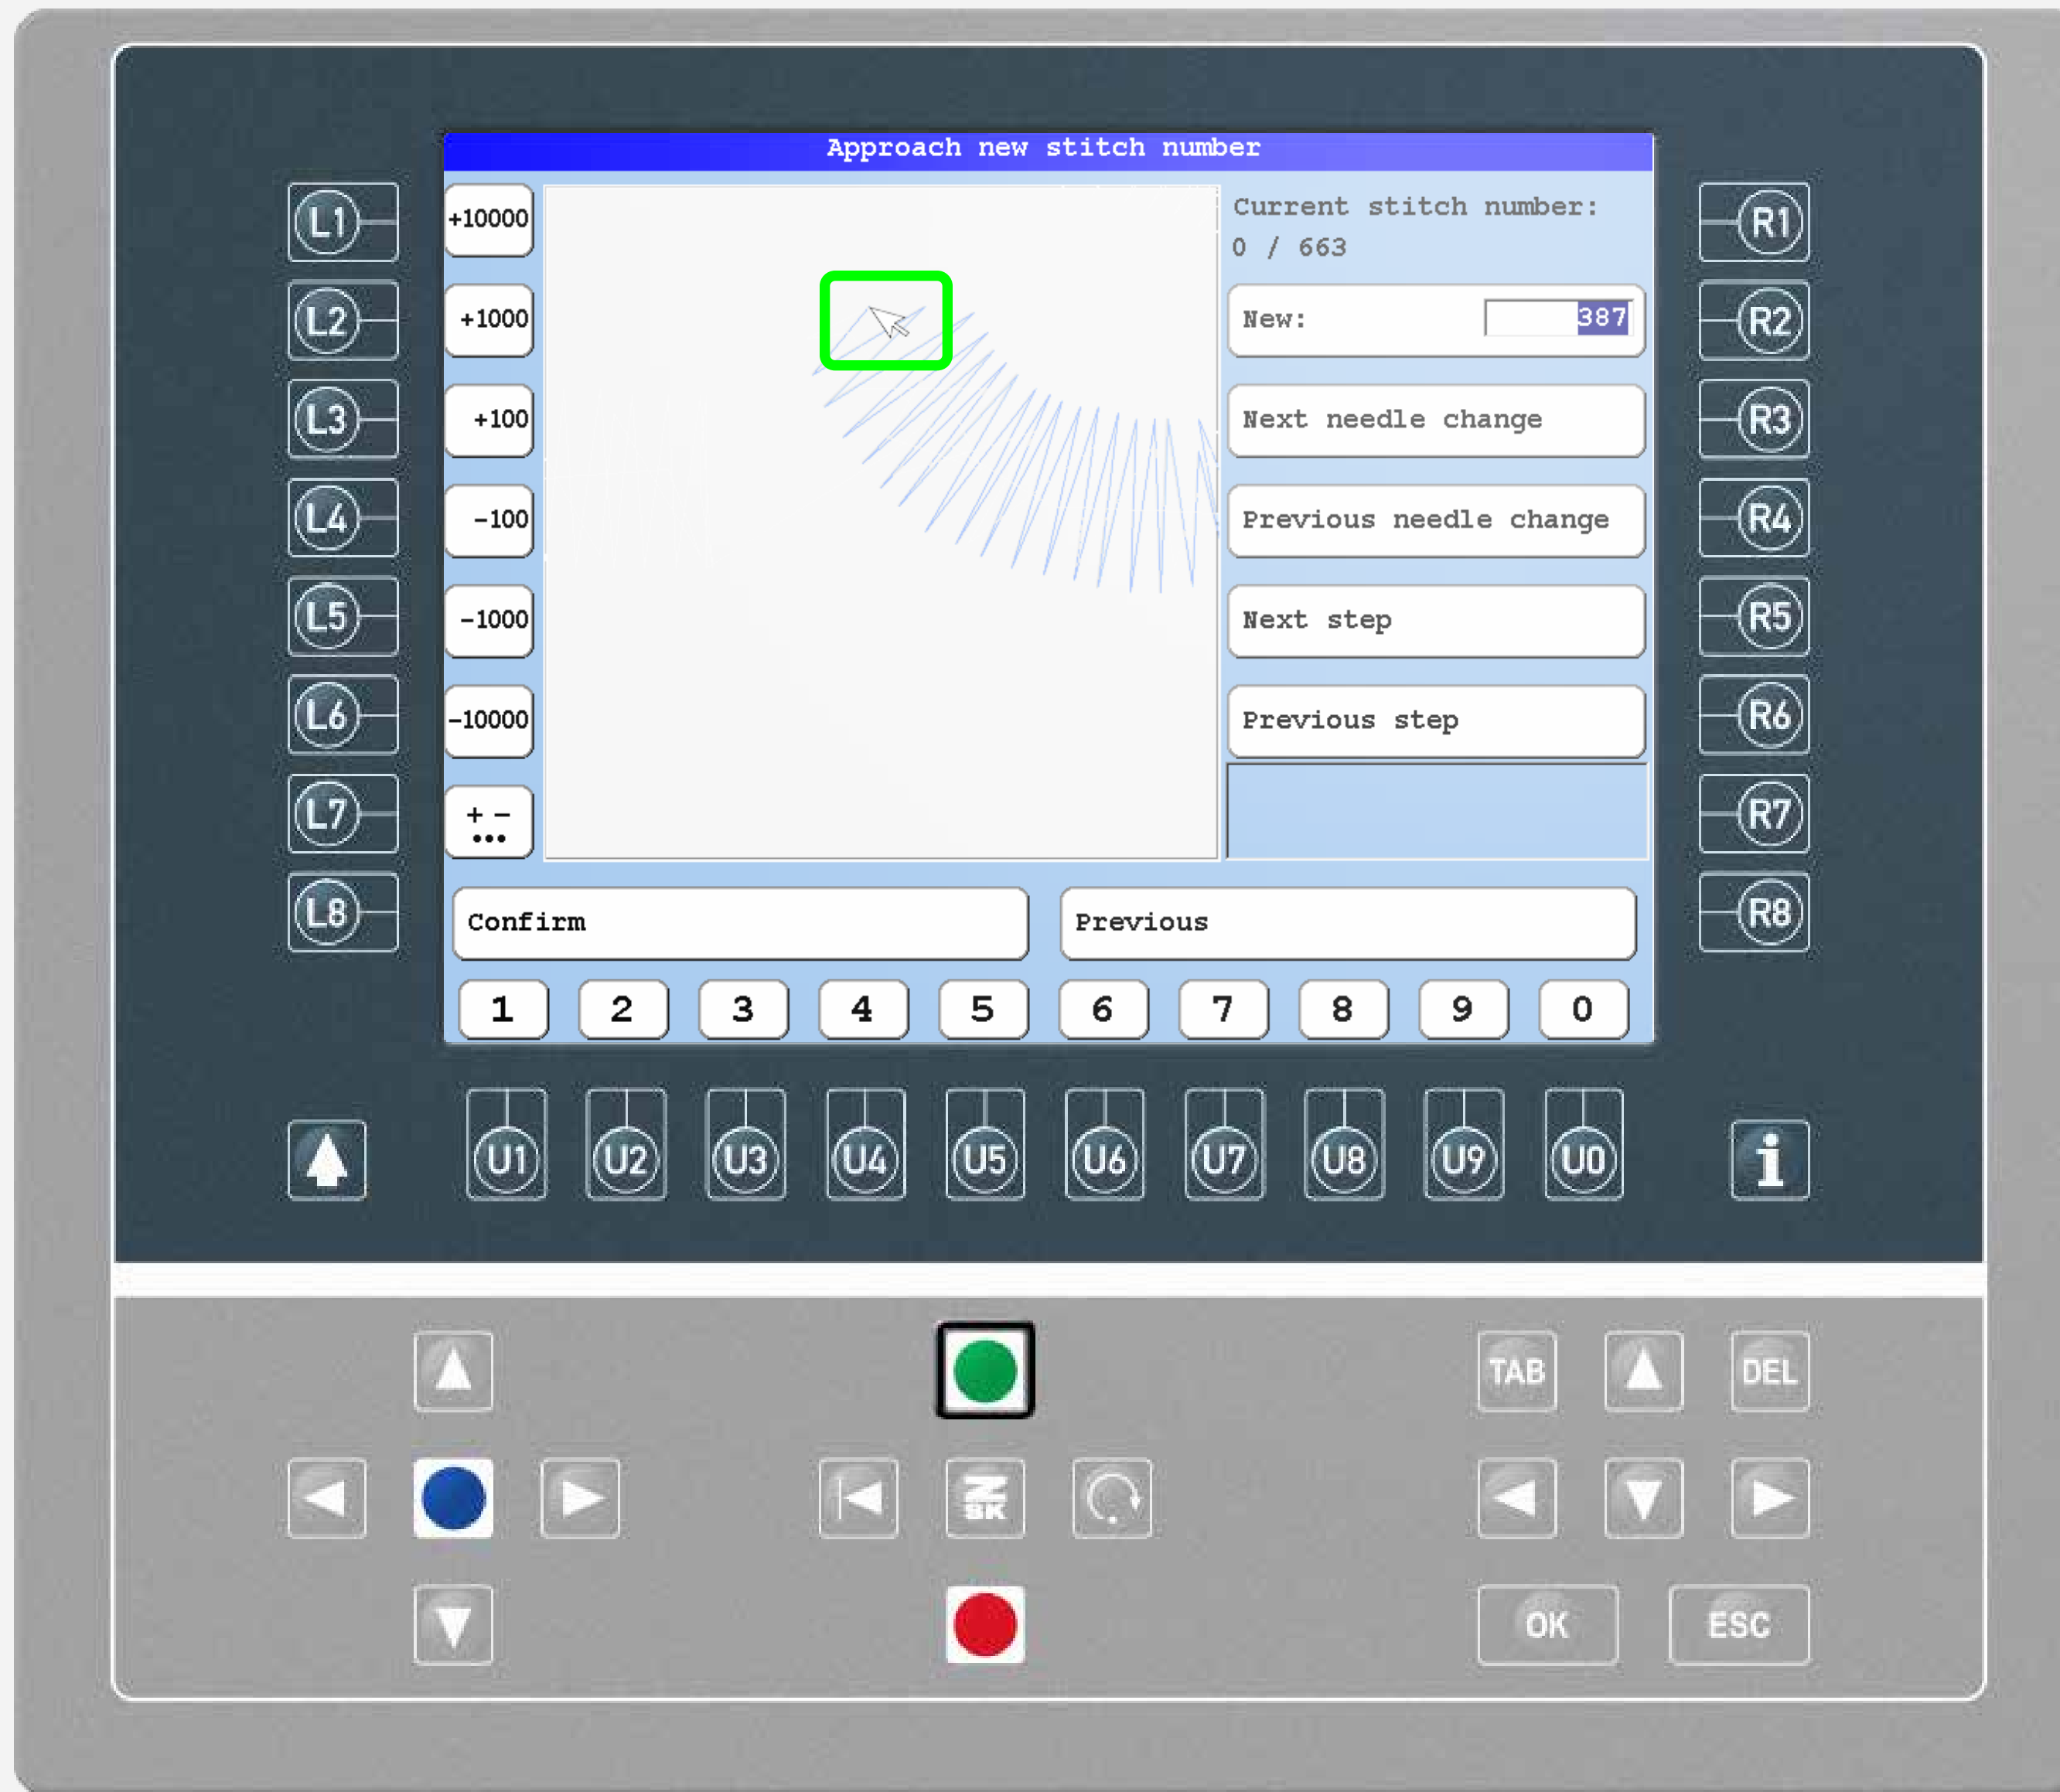

What?


With the help of the USB mouse, individual stitches in the design can be selected and the pantograph can be moved to this stitch.

Why?

Targeting a specific stitch in the design can be helpful for correction purposes. This is particularly useful when the pattern consists of a large number of stitches.


Requirements

A USB mouse is required which has to be plugged in before the machine is turned on. Even for machines without an encoder, the precise approach of a stitch can be used for correction.

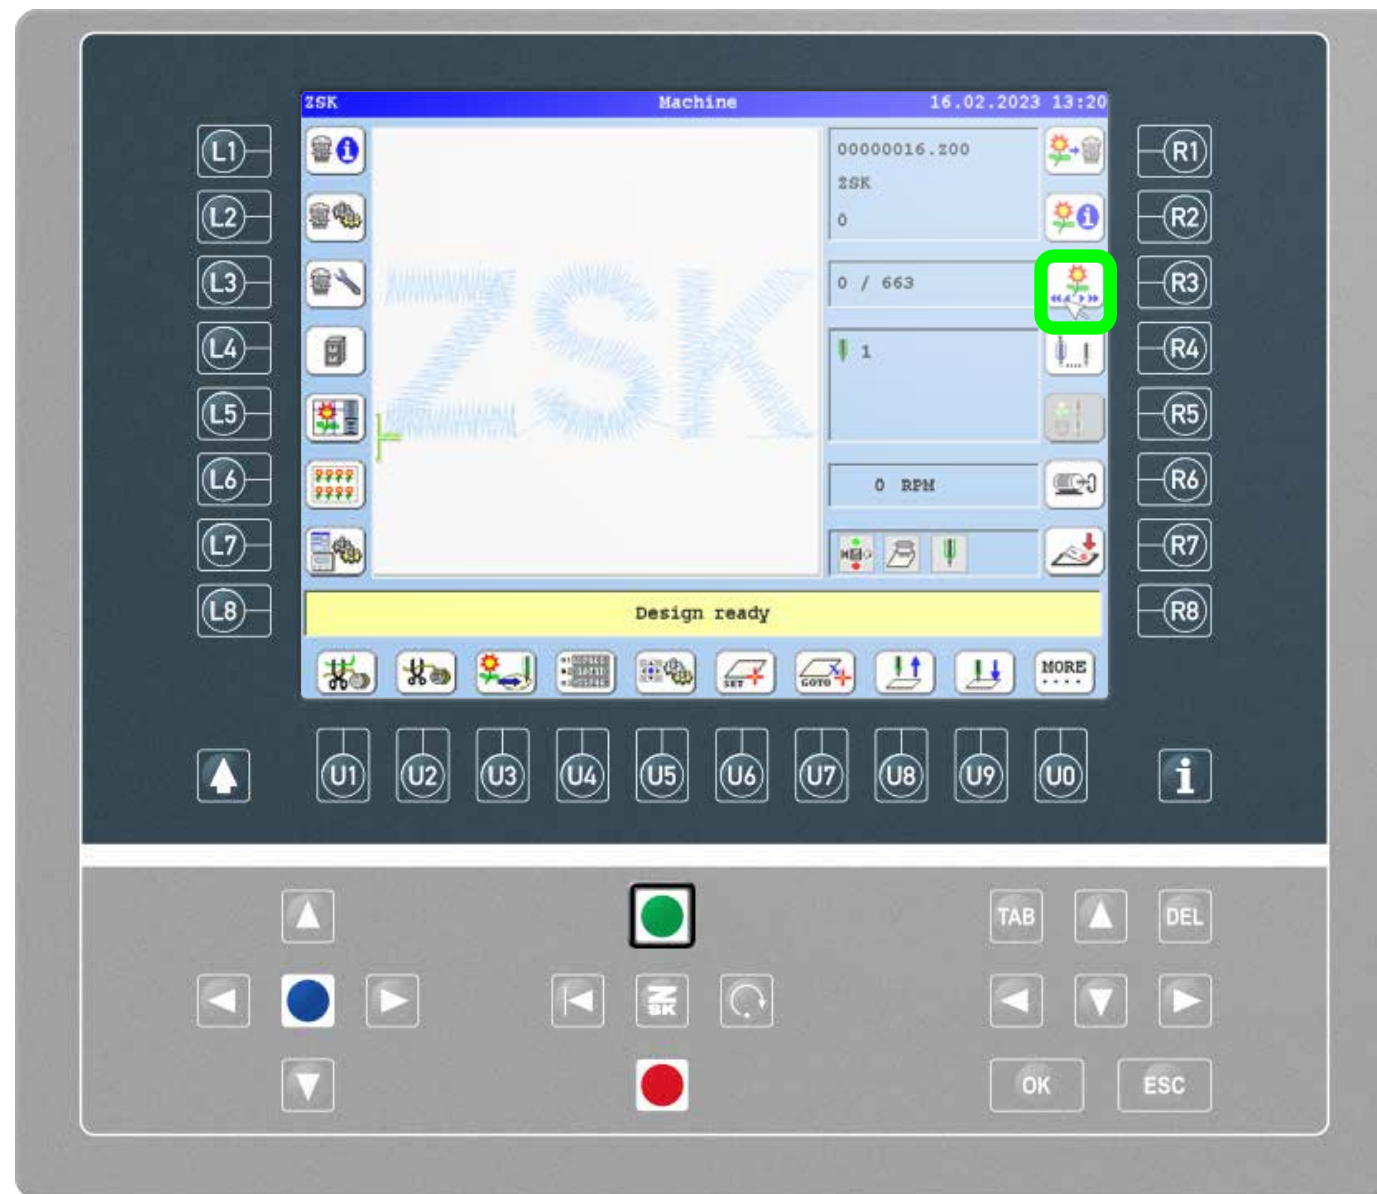


Step1

Select the highlighted menu icon using the R3 function key or by clicking with the left mouse button to open the window „Approach new stitch number“.

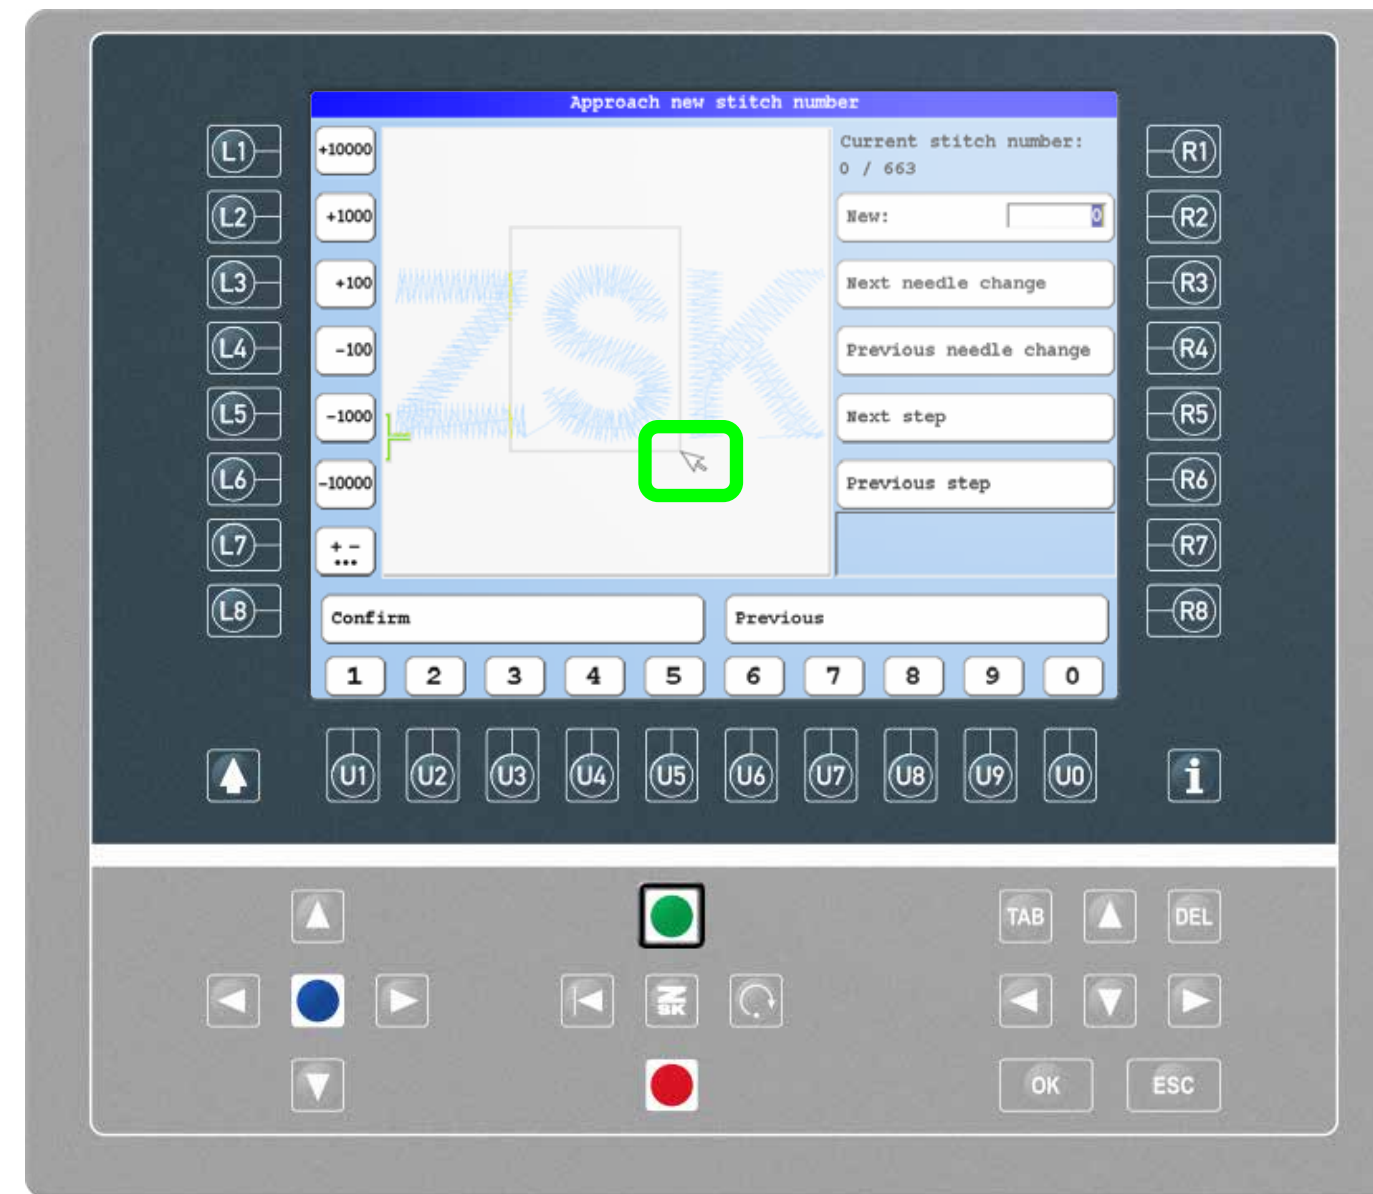

Step2

With the right mouse button pressed, you can use the box selection. Releasing the mouse button zooms into this section of the design. Repeat this step to zoom in even more precisely.

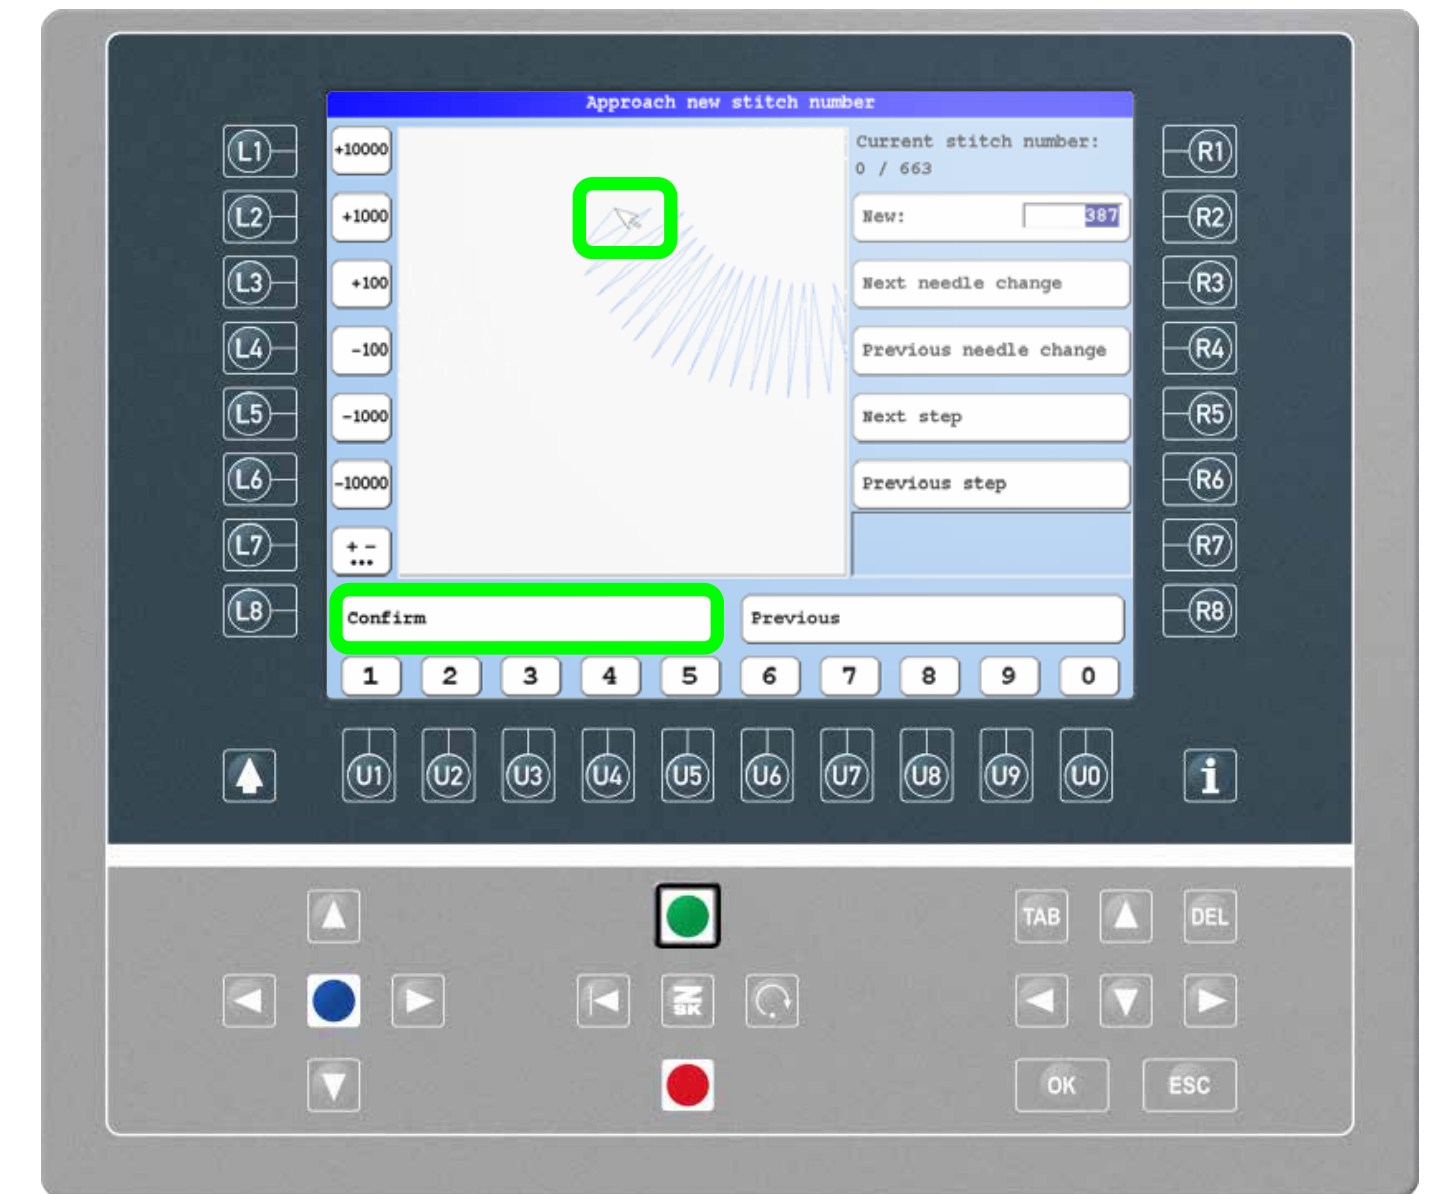


Step3

In the zoomed section, the exact stitch can be selected with the left mouse button. Click „Confirm“ or select L8 and move the pantograph to the selected stitch by pressing the start button.

Quicktip:

The pantograph speed can be set slower for precise manual approach.

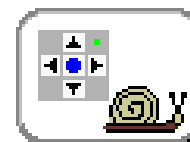



ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
47800 Krefeld, Germany

Fon: +49 (0) 2151 444 0
Fax: +49 (0) 2151 444 170
E-Mail: zsk@zsk.de