



LOWERING/LIFTING NEEDLE

Did you know this T8 function yet?



What?


Needle and presser foot can be lifted and lowered using the U8 and U9 function keys. Pressing these multiple times will further lower/lift the needle.

Why?

For example, when tracing, a lowered needle helps to precisely fit the design into the frame.

Quicktips:

- Pressing SHIFT and U8 lifts the needle to the upper position in one step.
- When pressing start, the needle will be lifted first, so no manual lifting is required.
- Pressing U9 once will lower the needle but maintain a large distance from the fabric. When using thin fabrics, the preset lowering height can be adjusted in the settings. Follow the instructions on page 2/2 for details.

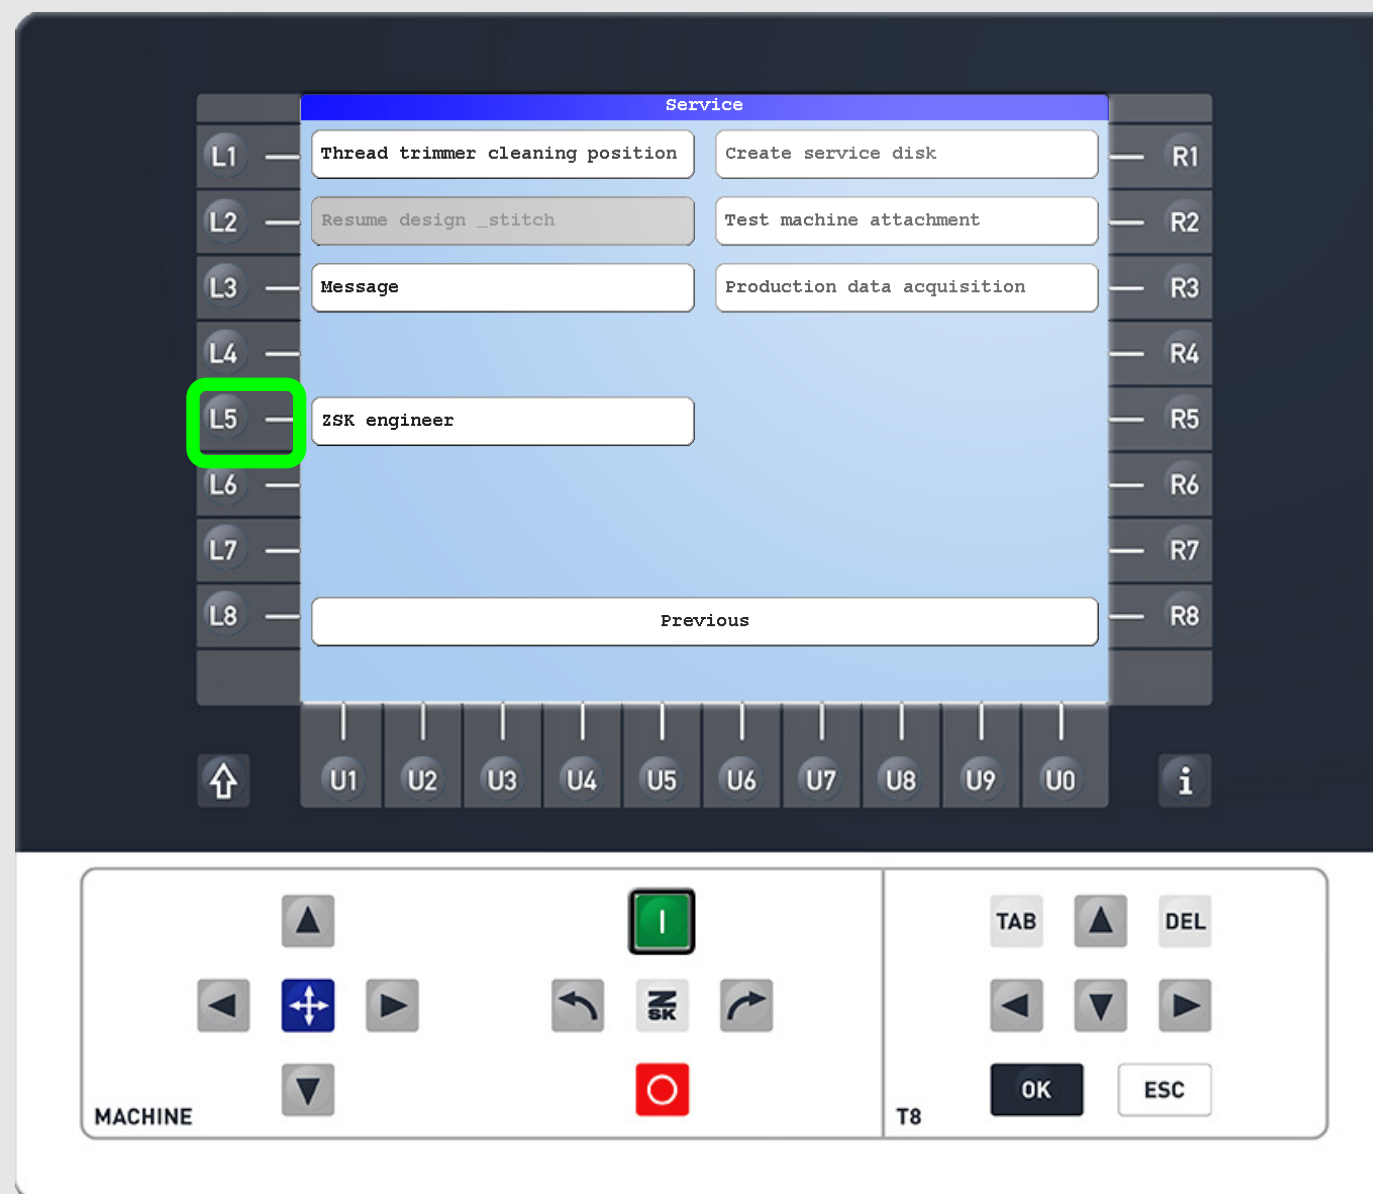

Step1


On the start screen press the R3 to enter the „Service“ tab. Press SHIFT+U0 to display all buttons.

Press the L5 function key to enter the „Service functions ZSK engineer“ tab.



Step2

Press the L1 function key to enter the „Machine degrees setup“ tab.

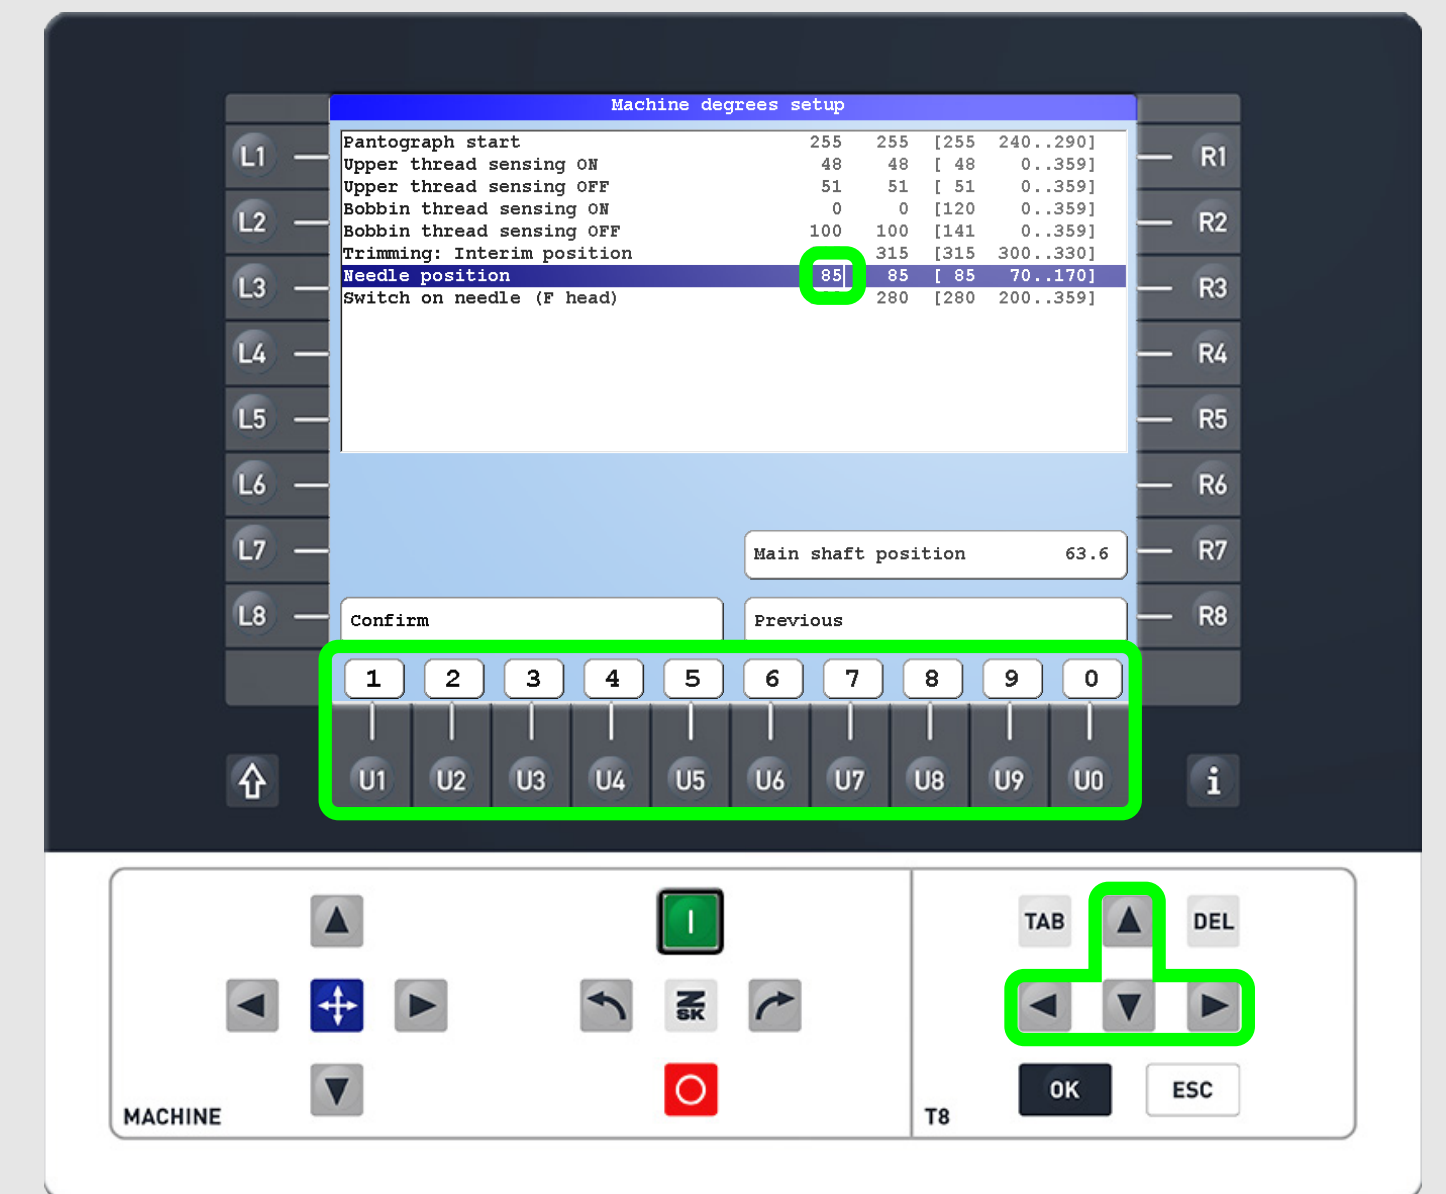

Step3

Use the arrow keys to select the needle positions row. Carefully change the highlighted value e.g to 90°/95°. Press L8 to confirm.

Modifications at your own risk.



ZSK Stickmaschinen GmbH
Magdeburger Str. 38-40
47800 Krefeld, Germany

Fon: +49 (0) 2151 444 0
Fax: +49 (0) 2151 444 170
E-Mail: zsk@zsk.de